
425-2

V//B/A Parts List

Model 20/35 Model 20/35 Oversize

YUBA MANUFACTURING CO. Marysville, California

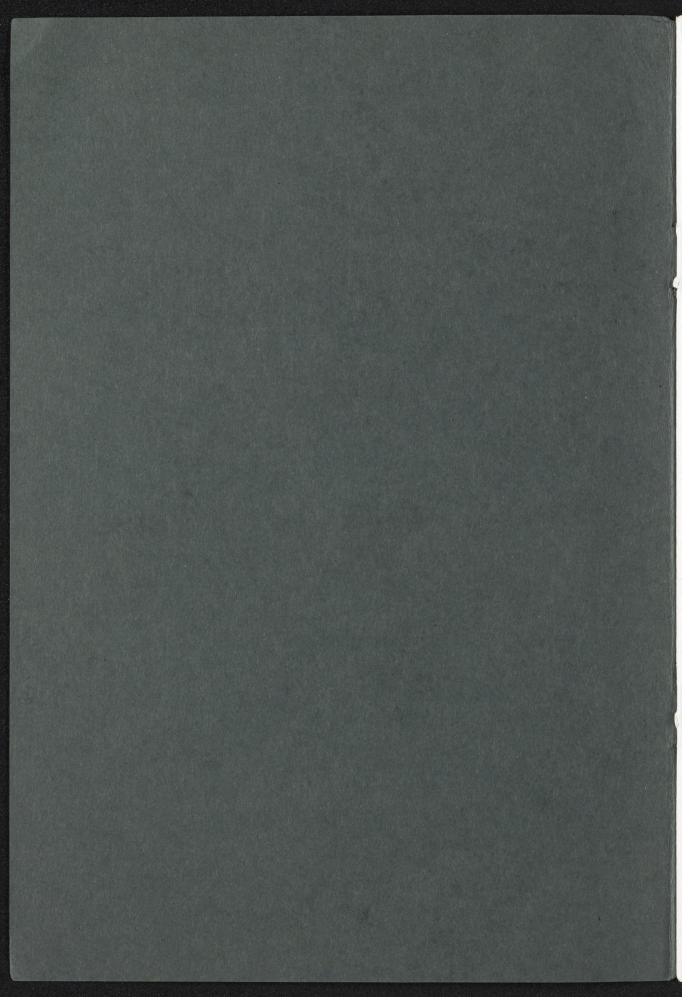

PARTS LIST YUBA BALL TREAD TRACTOR

Model 20/35 Model 20/35 Oversize

For Models 18 and 12 See Interchangeability Code Page 4



ISSUED BY

YUBA MANUFACTURING COMPANY

BENICIA AND MARYSVILLE, CALIFORNIA

SALES OFFICE

433 CALIFORNIA STREET, SAN FRANCISCO, CAL.

YUBA MANUFACTURING COMPANY

Factories: MARYSVILLE AND BENICIA

Main Office & Accounting Department; MARYSVILLE, CALIFORNIA

PHONE, 678



Branch Sales Offices

A. F. George Co., Inc., (Dealer): Los Angeles, California A. F. George Co., Inc., (Dealer); Fresno, California San Jose Tractor and Truck Co., (Dealer); San Jose, California Pengilly Company, (Dealer); Stockton, California Booth Bros., (Dealer); Paso Robles, California Electric Garage Company, (Dealer); Woodland, California Ketterlin Bros., (Dealer); Santa Rosa, California Young Hardware Company, (Dealer); Napa, California Willows Implement Co., (Dealer): Willows California Yuba Products Company, (Branch); Marysville, California Howard-Cooper Corp., (Dealer): Portland, Oregon Vaughn and Sons, (Dealer): Heppner, Oregon Ginn-Coleman Company, (Dealer): Moro, Oregon McClintock & Simpson, (Dealer); Pendleton, Oregon Duby and Caul, (Dealer); Baker, Oregon Oregon Hardware and Implement Co., (Dealer); La Grande and Wallowa, Oregon Yuba Products Company, (Branch); Spokane, Washington W. C. Gilley, (Dealer); Coulee, Washington O. E. Bell, (Dealer); Moscow, Idaho Yuba Products Company, (Dealer); Dallas, Texas Edmund Shipley, (Dealer); Hamlet, Nebraska Good Roads Machinery Co., (Dealer); Kennett Square, Pennsylvania Good Roads Machinery Co., (Dealer); Atlanta, Georgia Good Roads Machinery Co., (Dealer); Billings, Montana Honolulu Iron Works, (Dealer); Honolulu, T. H. Vulcan Iron Works, (Dealer); Callao, Peru, S. A.

Ordering

Always furnish us with MODEL and NUMBER of your tractor when ordering parts.

Order all parts from the BRANCH or DEALER in your territory—see page

opposite for directory of branches or dealers.

To obtain parts promptly give the NAME, CATALOG NUMBER, and LET-TER of parts wanted. The number of your tractor can always be found on the brass name plate at rear of transmission case.

When telegraphing or cabling for parts use UTILITY CODE as explained on

page 4.

Do not order by sets or pairs as this might be misleading; for instance, one set of connecting rod bearings might mean bearings for one rod or all four bearings for the engine. Always give the quantity of parts desired.

Always give complete shipping instructions including local address, and state

whether you wish goods forwarded by express, freight, or parcel post.

Below is a good form of letter to use in ordering:

Willows, Calif. Jan. 6, 1920.

Yuba Mfg. Co., Marysville, Calif.

Gentlemen:

Please send by parcel post to Wm. Jones, Willows, Calif.,—R. F. D. No. 2:

1—Hyatt bearing, Catalog No. 233

1—Steering cable, Catalog No. 141

I have a model 20/35, serial No.—

Yours truly,

Wm. Jones.

2 2

Returned Goods and Claims

Prepay all charges on parts shipped in for repairs or replacement.

Give owner's name and address on the shipping tag. WRITE CLEARLY OR PRINT.

Parts shipped in for repairs should be accompanied by letter giving instructions regarding the work to be done.

When placing claim for replacement give all information that will enable us to make fair adjustment.

Claims for shortage or error in order must be made upon receipt of goods or same will not be considered

Explanation of Code

The UTILITY CODE on opposite page was devised for convenience and economy in telegraphing for parts, etc.

Regarding parts code, see code word before each item in the book.

(Note: If your order written in plain language does not exceed ten words, do not use code words as there is no saving or advantage in doing so.)

The following example will serve to illustrate the code use:

"Ship via express C. O. D. for tractor number nine twenty 2 fifteen AB 1 twenty one AB."

The above message would be rated a 20-word telegram.

Using the code it reduces to 8 words as follows:

"Saber saloon nine twenty 2 ably 1 abyss."

Interchangeability Code

The numeral alone designates used on Model 20/35 Standard and Oversize.

The numeral with letter A designates used on Model 20/35 Standard and Oversize and Model 18.

The numeral with letter A and B designates used on Model 20/35, Standard and Oversize, Model 18 and Model 12.

UTILITY CODE


| CODE | TRANSLATION | |
|---------|--|--|
| abbath | When and how did you ship our order? | |
| | Ship via express C. O. D. to | |
| | Ship via express open account to | |
| achem | Ship via parcel post C. O. D. to | |
| acred | Ship via parcel post open account to | |
| ad | Ship via freight on order bill of lading to | |
| addle | Ship via freight open account to | |
| ıfe | Ship to us via express | |
| | Ship to us via parcel post | |
| | Ship to us via freight | |
| | For tractor number | |
| | Include in first carload | |
| | Reply by telegraph | |
| lutary | Referring to our letter of | |
| | Referring to your letter of | |
| | Order not clear. Refer to parts list and wire corrected order | |
| alve | You have not specified tractor number | |
| | Referring to your telegram of | |
| | Referring to our telegram of | |
| | Have received no reply to our letter of | |
| | Wire answer to our correspondence of | |
| nction | We have shipped via freight | |
| nctum | We have shipped via express | |
| and | We have shipped via parcel post | |
| | We expect to ship | |
| | The last of this week | |
| | The first of next week | |
| | The middle of next week | |
| | The last of next week | |
| initary | | |
| | Cancel our order of | |
| | Ship duplicate order of | |
| | When will you ship our order of? | |
| | We or I have forwarded to you via prepaid express | |
| | Trace our shipment of | |
| | Make necessary repairs and return via freight | |
| | Ship duplicates of parts sent to you and return old parts | |
| | Ship duplicates of old parts sent to you | |
| tan | Make necessary repairs and return by either express or parcel post | |
| | Wire price and delivery on | |
| | Model 12/20 | |
| tin | Model 20 / 35 "D" Motor | |
| tire | Model 20/35 "M" Motor | |
| | When can you ship one | |
| | When can you ship carload? | |
| | There can you sinp carroad. | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

LUBRICATION CHART.

MAGNETO—Use sewing machine oil. Lubricate once a week with two drops of oil in each bear-

REVERSE CLUTCHES— Remove brass screw in drum and fill with same grease as used in transmission. Use grease gun. Fill every 500 prosesses.

TRANSMISSION—In summer use light transmission grease and in winter a heavy transmission oil. Replenish as needed. Clean twice a season. The oil level should just touch the shafting.

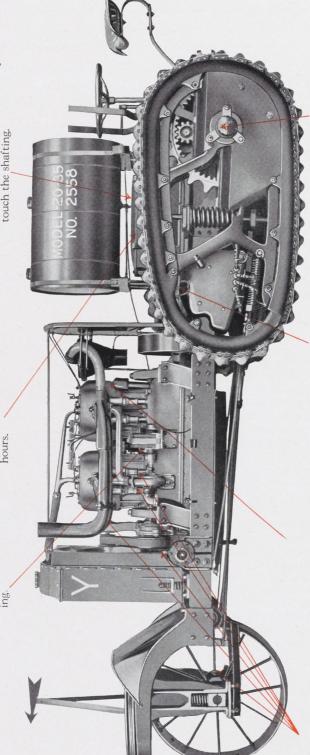


GREASE CUPS— Turn down one-half cup twice daily.

MOTOR—Unscrew cap and fill thru breather. Use heavy tractor motor oil in summer and mediumor light in winter. Drain, clean and re-fill every 50 hours.

REAR AXLE GREASE CAP—Use heavy cup grease. Fill daily. Screw down every two hours.

TRACK OIL POTS—Use crude oil for summer and heavy black lubricating oil for winter. Fill daily.

SPECIFICATION SHEET

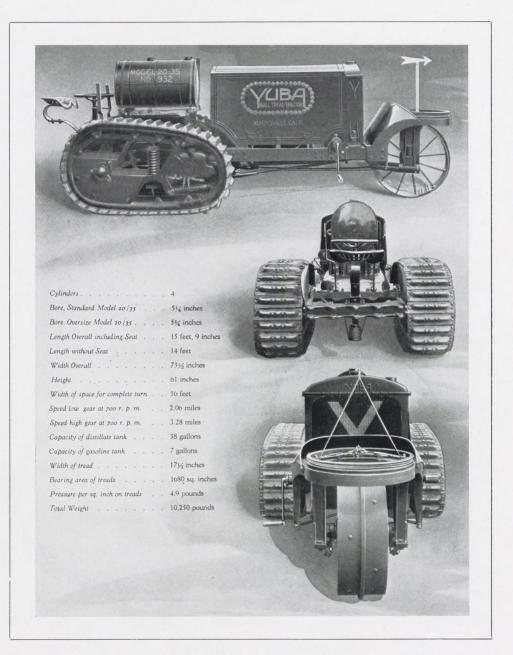

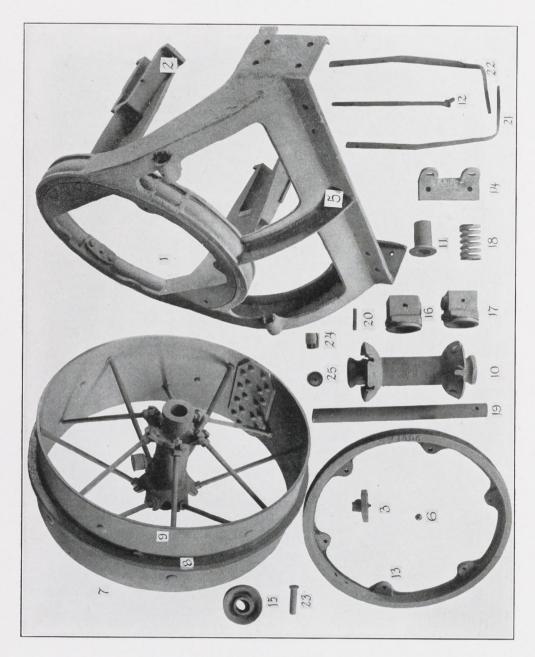


PLATE NO. 1—FRONT END

FRONT END

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|-------|----------------|--|-------------------------------|----------------------|
| Aback | 1AB | Front end assembly | 1 | 1 |
| Abaft | 2AB | Front end inside ball race | 1 | 1 |
| Abase | 3AB | Inside ball race plug | 1 | 1 |
| Abash | 4AB | 3/8" pipe plug | 1 | * |
| Abate | 5AB | Outside ball race and main frame support | 1 | 1 |
| Abba | 6AB | 1" steel ball | 80 | 1 |
| Abbe | 7AB | Complete front wheel | 1 | 1 |
| Abbey | 8AB | Front wheel band | 1 | 1 |
| Abbot | 9AB | Front wheel rim, 12" wide | 1 | 1 |
| Abeam | 1-9AB | Front wheel butt strap | 1 | 1 |
| Abed | 10AB | Front wheel hub | 1 | 1 |
| Abet | 11AB | Front wheel bushing | 2 | 1 |
| Abhor | 12AB | Front wheel spoke | 12 | 1 |
| Abide | 13AB | Rope circle | 1 | 1 |
| Able | 14AB | Front wheel fork tie plate, lower | 2 | 1 |
| Ably | 15AB | Steering cable sheave, upper | 2 | 1 |
| Abode | 16AB | R. H. front wheel sliding box | 1 | 1 |
| About | 17AB | L. H. front wheel sliding box | 1 | 1 |
| Above | 18AB | Front wheel spring | 2 | 1 |
| Abuse | 19AB | Front wheel shaft | 1 | 1 |
| Abut | 20AB | Front wheel shaft pin, ½"x3" | 1 | 1 |
| Abyss | 21AB | R. H. front wheel scraper bar | 1 | 1 |
| Ace | 22AB | L. H. front wheel scraper bar | 1 | 1 |
| Ache | 23AB | Steering cable sheave upper pin | 2 | 1 |
| Acid | 24AB | Steering cable sheave, Hyatt roller brg. 18122 | 2 | 1 |
| Acme | 25AB | Front wheel Empress Grease Cup No. 2 | 1 | 1 |

^{*} Omitted from plate.

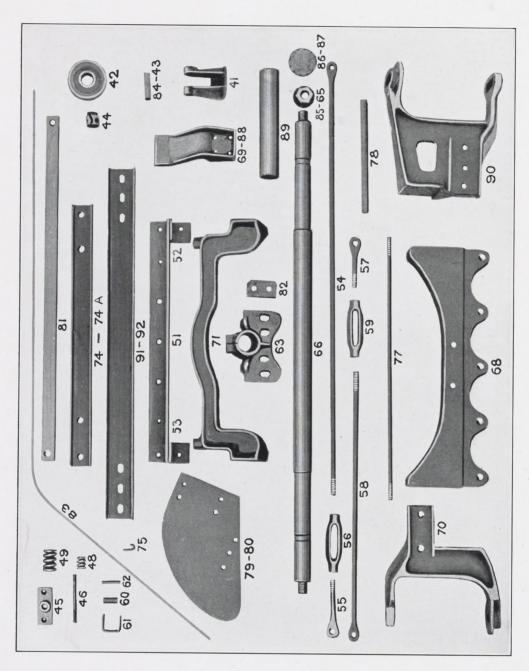


PLATE NO. 2-MAIN FRAME

MAIN FRAME

| CODE | Part Number | NAME OF PART | Number used per Tractor | Showr on Plate |
|-----------|----------------|---|-------------------------------|----------------------|
| Acorn | 41AB | Steering cable sheave, lower bracket | 2 | 2 |
| Acre | 42AB | Steering cable sheave, lower and upper | 4 | 2 |
| Acrid | 43AB | Steering cable sheave, lower pin | 2 | 2 |
| Act | 44AB | Steering cable sheave, Hyatt roller brg. 18122 upper or lower | 4 | 2 |
| Actor | 45 | Radiator support plate | 2 | 2 |
| Acute | 46 | Radiator support stud special, 5/8"x7" | 2 | 2 |
| Adage | 48 | Radiator support spring, upper, 134"x138" O. D | 2 | 2 |
| Adapt | 49 | Radiator support spring, lower, 3" long, 21/8" O. D | 2 | _ |
| Adden | 51AB | Transmission support angle | 1 | 2 |
| Adder | 52AB | Transmission support angle bracket, R. H | 1 | 2 |
| Addle | 53AB | Transmission support angle bracket, L. H | - | 2 |
| Adept | 54 | Front truss rod | 1 | 2 |
| Adieu | 55AB | Front truss rod end, 7/8"x7" | 2 | 2 |
| Adit | 56AB | Front truss rod turnbuckle, 7/8" diam. | 2 | 2 |
| Admit | 57AB | Rear truss rod end, 7/8"x7" | 2 | 2 |
| Admix | 58AB | Rear truss rod 7/",2/ 2" | 2 | 2 |
| Ado | 59AB | Rear truss rod, 7/8"x3' 3" | 2 | 2 |
| Adobe | 60AB | Rear truss rod turnbuckle | 2 | 2 |
| Adopt | 61AB | Steering cable roller | 2 | 2 |
| Adopt | 62AB | Steering cable roller bracket | 2 | 2 |
| | 63AB | Steering cable roller bracket pin, 3/8"x23/8" | 2 | 2 |
| Adorn | 65A | Rear axle bracket, R. H. or L. H. | 2 | 2 |
| Adult | | Rear axle nut, special, R. H. | 1 | 2 |
| Adunc | 66A | Rear axle | 1 | 2 |
| Adust | 68 | Drawbar | 1 | 2 |
| Adz | 69 | Engine support bracket, R. H | 2 | 2 |
| Aerie | 70 | Track support spring yoke, standard R. H. or L. H | 2 | 2 |
| Afar | 71A | Truss rod support | 1 | 2 |
| Affix | 72 | R. H. main frame channel | 1 | * |
| Afire | 73 | L. H. main frame channel | 1 | * |
| Afoot | 74 | Main frame track support spring yoke brace, standard, front | 1 | 2 |
| Afore | 1-74 | Main frame track support spring yoke brace, standard, rear | 1 | 2 |
| Afoul | 75AB | Hook bolt | 2 | 2 |
| Aft | 76A | Throttle control pipe, supporting strap | 1 | * |
| Aftermost | 77 | Rod bolt | 1 | 2 |
| Afternoon | 78 | Pipe separator | 1 | 2 . |
| Agape | 79 | R. H. foot guard | 1 | 2 |
| Agate | 80 | L. H. foot guard | 1 | 2 |
| Agave | 81 | Flat truss rod | 2 | _ |
| Age | 82AB | Rear axle bracket, filler plate | 4 | 2 |
| aged | 83 | Throttle control pipe | | 2 |
| gent | 84 | Steering cable upper sheave pin | 1 | 2 |
| gile | 85 | Rear axle nut, special, L. H. | 2 | 2 |
| agio | 86 | R H rear ayle grasse can | 1 | 2 |
| ago | 87 | R. H. rear axle grease cap. | 1 | 2 |
| agog | 88 | L. H. rear axle grease cap. | 1 | 2 |
| gony | 89A | L. H. engine support bracket | 2 | - 2 |
| grarian | 90 | Rear axle sleeve. | 2 | 2 |
| | .91 | Track support spring yoke, wide tread | 2 | 2 |
| igue | 92 | Track support spring yoke brace, wide tread, front | 1 | 2 |
| hoy | ,,, | Track support spring yoke brace, wide tread, rear | 1 | 2 |
| | | | | |

^{*}Omitted from plate.

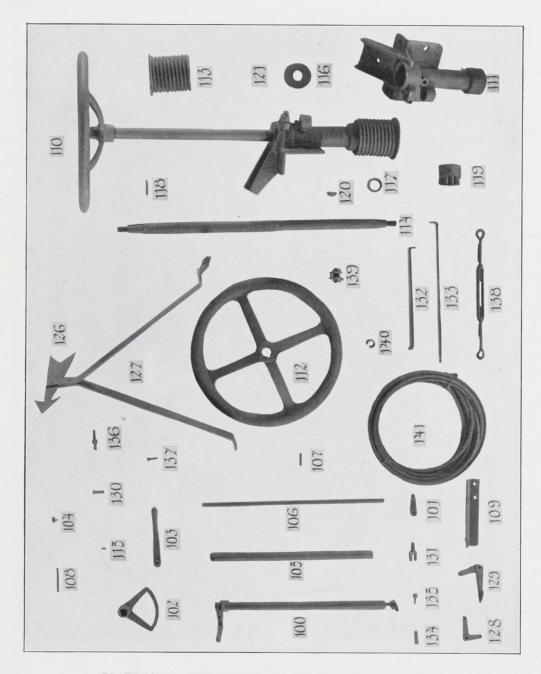


PLATE NO. 3—STEERING GEAR AND THROTTLE CONTROL

STEERING GEAR AND THROTTLE CONTROL

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|-------------|----------------|---|-------------------------------|----------------------|
| Nim | 100AB | Throttle lever and stand assembly | 1 | 3 |
| Air | 101AB | Throttle lever | 1 | 3 |
| jar | 102AB | Throttle quadrant | 1 | 3 |
| kin | 103AB | Throttle handle | 1 | 3 |
| larm | 104AB | Throttle friction | 1 | 3 |
| las | 105AB | Throttle post | 1 | 3 |
| lder | 106AB | Throttle shaft | 1 | 3 |
| lert | 107AB | Throttle stand taper pin | 2 | 3 |
| libi | 108AB | Throttle spring No. 19 wire ¼" O.D. 3" long | 1 | 3 |
| lien | 109AB | Throttle angle | 1 | 3 |
| live | 110AB | Steering wheel and bracket assembly | 1 | 3 |
| lkali | 111AB | Steering wheel and seat bracket | 1 | 3 |
| lley | 112AB | Steering wheel | 1 | 3 |
| llow | 113AB | Steering wheel spool | 1 | 3 |
| lloy Ims | 114AB | Steering wheel shaft | 1 | 3 |
| long | 115AB | Steering wheel shaft dowel pin | 1 | 3 |
| loof | 116AB 117AB | Steering wheel washer | 1 | 3 |
| loud | 117AB 118AB | Steering wheel pipe spacer | 1 | 3 |
| ltar | 119AB | Steering wheel feather key | 1 | 3 |
| maze | 120AB | Steering wheel, Hyatt rol. brg. No. 19192 | 2 | 3 |
| mber | 120AB 121AB | Steering wheel, Woodruff key No. 21 | 1 | 3 |
| mble | 121AB 126AB | Steering wheel ¼" pipe plug Steering arrow | 1 | 3 |
| men | 120AB | Steering arrow strap assembly 217 | 1 | 3 |
| mid | 128AB | Bell crank | 2 | 3 |
| mple | 129AB | Throttle control foot accelerator | 1 | 3 |
| mply | 130AB | Throttle control accelerator pin | 1 | 3 |
| muck | 131AB | Throttle control accelerator eye bolt | 1 | 3 |
| muse | 132AB | Throttle control reach rod. | 1 | 3 |
| new | 133AB | Throttle control reach rod. | 1 | 3 |
| nger | 134AB | Throttle control rod end. | 1 | 3 |
| nkle | 135AB | Throttle control swivel block. | 1 | 3 |
| nnex | 136AB | Throttle control pin for bell crank. | 1 | 3 |
| nnoy | 137AB | Throttle control wire holder, control end | î | 3 |
| nnul | 138AB | Steering rope turnbuckle 3/8" | 2 | 3 |
| nt | 139AB | Steering rope clip 3/8" galvanized steel | 2 | 3 |
| ntic | 140AB | Steering rope thimble 3/8" galvanized steel | 2 | 3 |
| nvil | 141AB | Steering rope 3/8" steel 43' 9" | 1 | 3 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | 4 - 1 - 1 - 1 | | | |
| | | | | |

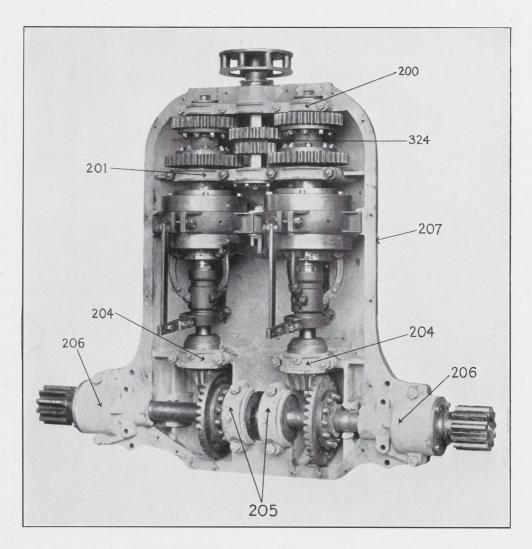


PLATE NO. 4—TRANSMISSION CASE

TRANSMISSION

| CODE | Part Number | NAME OF PART | Number used per Tractor | Showr on Plate |
|---------|----------------|--|-------------------------------|----------------------|
| orta | 200 | Bearing cap, outside, front clutch and drive shaft | 1 | 4 |
| pace | 201 | Bearing cap, inside, front clutch and drive shaft | 1 | 4 |
| pe | 204 | Bearing cap, bevel pinion | 2 | 4 |
| pex | 205AB | Bearing cap, cross shaft, inside | 2 | 4 |
| .pple | 206 · | Bearing cap, cross shaft, outside | 2 | 4 |
| pply | 207 | Transmission case body with bearing caps. | 1 | 4 |
| rbor | 208 | Drive shaft assembly (standard) | 1 | 5 |
| rch | 1-208 | | 1 |) |
| | | Drive shaft assembly (special) | 1 | - |
| rid | 209AB | Drive shaft, inside coupling flange | 1 | 5 |
| rise | 210 | Drive shaft stuffing box | 1 | 5 |
| rmor | 211 | Drive shaft sleeve | 1 | 5 |
| rmy | 212 | Drive shaft gland for stuffing box | 1 | 5 |
| roma | 213 | Drive shaft | 1 | 5 |
| rray | 214AB | Drive shaft shifting gear, double (24 teeth and 18 teeth) | 1 | . 5 |
| rrow | 1-214AB | Drive shaft shifting gear, double (20 teeth and 16 teeth) | 1 | * |
| rson | 215AB | Drive shaft feather key for sleeve | 1 | - 5 |
| rt | 216AB | Drive shaft washer 2" O.D., $\frac{3}{16}$ " thick, $1\frac{1}{16}$ " I.D | 1 | 5 |
| sh | 217 | Drive shaft washer 3" O.D., $\frac{3}{16}$ " thick, $1\frac{1}{16}$ " I.D | 1 | 5 |
| ssay | 218AB | Drive shaft Woodruff key 3/8"x1½" | 1 | 5 |
| tlas | 219 | Drive shaft Hyatt roller brg. No. 27123 | 2 | 5 |
| tom | 220 | Front clutch shaft, standard assembly 31 teeth and 37 teeth | 2 | 5 |
| ttic | 1-220 | Front clutch shaft, special assembly, 35 teeth and 39 teeth | 2 | * |
| udit | 221AB | Front clutch shaft gear hub | 2 | 5 |
| uger | 222AB | Front clutch shaft low speed gear rim, 37 teeth | 2 | 5 |
| uk | 1-222AB | Front clutch shaft low speed gear rim, 39 teeth | 2 | * |
| unt | 223AB | Front clutch shaft high speed gear rim, 31 teeth | 2 | 5 |
| vail | 1-223AB | Front clutch shaft high speed gear rim, 35 teeth | 2 | * |
| vert | 224AB | Front clutch shaft special gear bolt | 32 | 5 |
| wake | 225 | Front clutch shaft | 2 | 5 |
| ward | 226 | Front clutch shaft washer, front end. | 2 | 5 |
| xe | 227 | Front clutch shaft washer, rear of front bearing $2\frac{5}{8}$ " O.D., $1\frac{9}{16}$ " I.D. | 2 | 5 |
| zure | 228AB | Front clutch shaft special castellated nut | 2 | 5 |
| abe | 229 | Front clutch shaft dowel | 2 | * |
| achelor | 230 | Front clutch shaft washers, rear bearing. | 4 | 5 |
| acon | 231AB | Front clutch shaft, Woodruff key 3/8"x11/2" | 2 | 5 |
| adger | 231AB | Front clutch shaft, Hyatt roller bearing, front end | 2 | 5 |
| ail | 233 | Front clutch shaft, Hyatt roller bearing, nont end | 2 | 5 |
| ait | 235 | | 2 | 5 |
| ald | 236 | Rear clutch shaft assembly | 2 | 5 |
| aid | 230 | Rear clutch shaft bearing cage at bevel pinion | 2 | , |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

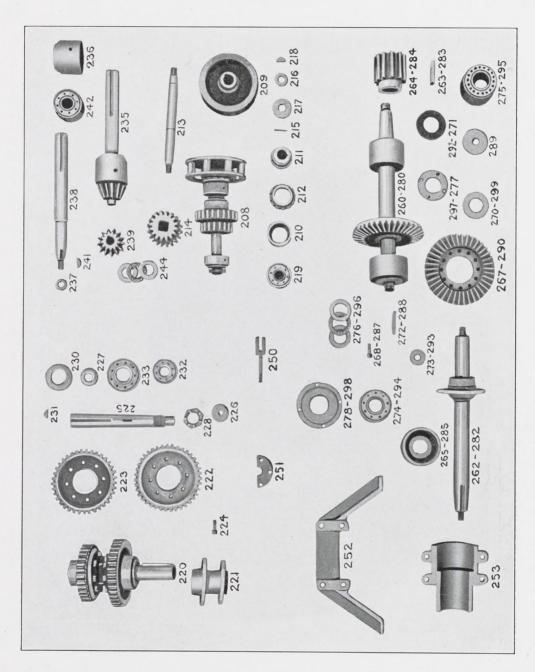


PLATE NO. 5—TRANSMISSION

TRANSMISSION

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|----------|----------------|--|-------------------------------|----------------------|
| Balk | 237 | Rear clutch shaft washer, rear end | 2 | 5 |
| Band | 238 | Rear clutch shaft | 2 | 5 |
| Bang | 239 | Rear clutch shaft, bevel pinion | 2 | 5 |
| Banyan | 241AB | Rear clutch shaft, Woodruff key | 2 | 5 |
| Bantam | 242 | | | |
| Barn | 244 | Rear clutch shaft, Hyatt roller bearing No. 27177 | 2 | 5. |
| Basalt | 250 | Rear clutch shaft, ball thrust bearing | 2 | 5 |
| | | Transmission body jaw bolt | 1 | 5 |
| Basin | 251 | Drive shaft, half washer for rear bearing | 1 | 5 |
| Bask | 252 | Extension bracket for R. H. or L. H. cross shaft, wide tread. | 2 | 5 |
| Bat | 253 | Extension bearing caps, R. H. or L. H. cross shaft, wide tread | 4 | 5 |
| Beach | 260 | L. H. cross shaft assembly, standard | 1 | 5 |
| Beaker | 1-260 | L. H. cross shaft assembly, extra wide | 1 | * |
| Bedim | 262 | L. H. cross shaft with bevel gear hub assembled | 1 | 5 |
| Bee | 263A | L. H. cross shaft feather key for pinion | 1 | 5 |
| Beer | 264A | L. H. cross shaft pinion, 11 tooth | 1 | 5 |
| Beeve | 1-264A | L. H. cross shaft pinion, 12 tooth | 1 | * |
| Beg | 265 | L. H. cross shaft bearing cage at bevel gear | 1 | 5 |
| Belle | 267AB | L. H. cross shaft bevel gear rim | 1 | 5 |
| Bellow | 268AB | L. H. cross shaft special bolt for gears | 12 | 5 |
| Bench | 270 | L. H. cross shaft washer for inner roller bearing | 1 | 5 |
| Berth | 271 | L. H. cross shaft leather washer for outer roller bearing | | 5 |
| Beverage | 272AB | | 1 | |
| Bib | 272AB 273AB | L. H. cross shaft feather key for bevel gear | 1 | 5 |
| | | L. H. cross shaft, washer for pinion | 1 | 5 |
| Bilk | 274AB | L. H. cross shaft, Hyatt roller bearing inner, No. 27133 | 1 | 5 |
| Binary | 275 | L. H. cross shaft, Hyatt roller bearing outer, No. 17186 | 1 | 5 |
| Biped | 276 | L. H. cross shaft, ball thrust bearing | 1 | 5 |
| Birch . | 277 | L. H. cross shaft end plate, washer | 1 | 5 |
| Bird | 278 | L. H. cross shaft end plate | 1 | 5 |
| Bison | 279 | L. H. cross shaft with bevel gear hub assembled wide tread. | 1 | * |
| Bite | 280 | R. H. cross shaft assembly, standard | 1 | 5 |
| Blab | 1-280 | R. H. cross shaft assembly, extra wide | 1 | 5 |
| Blain | 282 | R. H. cross shaft, with bevel gear hub, assembled | 1 | 5 |
| Blame | 283A | R. H. cross shaft feather key for pinion | 1 | 5 |
| Blank | 284A | R. H. cross shaft pinion, 11 tooth | 1 | 5 |
| Blast | 1-284A | R. H. cross shaft pinion, 12 tooth | 1 | 5 |
| Blaze | 285 | R. H. cross shaft bearing cage at bevel pinion | 1 | 5 |
| Bleak | 287AB | R. H. cross shaft special bolt for gear | 12 | 5 |
| Bled | 288A | R. H. cross shaft feather key for bevel gear | 1 | 5 |
| Bless | 289 | R. H. cross shaft washer $\frac{1}{4}$ " thick, $1\frac{1}{16}$ " I.D., 4 " O.D | 1 | 5 |
| Bloat | 290AB | R. H. cross shaft bevel gear rim | | |
| Block | | | 1 | 5 |
| | 292 | R. H. cross shaft leather washer for outer roller bearing | 1 | 5 |
| Blood | 293AB | R. H. cross shaft steel washer for pinion $\frac{1}{4}''$ thick, $1\frac{1}{16}''$ | | |
| 210000 | 2011 | I.D., 2 ⁵ / ₁₆ " O.D. | 1 | 5 |
| Bloom | 294A | R. H. cross shaft, Hyatt roller bearing No. 27133 | 1 | 5 |
| low | 295 | R. H. cross shaft, Hyatt roller bearing No. 17186 | 1 | 5 |
| lue | 296 | R. H. cross shaft ball thrust bearing | 1 | 5 |
| Blunt | 297 | R. H. cross shaft steel washer for end plate $\frac{1}{8}''$ thick, $2\frac{9}{16}''$ I.D., $4\frac{3}{4}''$ O.D | 1 | 5 |
| oard | 298 | R. H. cross shaft end plate | 1 | 5 |
| oggle | 299 | R. H. cross shaft washer for inner roller bearing | 1 | 5 |
| Boil | 300 | R. H. cross shaft with bevel gear assembled, wide tread | 1 | * |
| | .700 | 13. 11. c1055 share with bever gear assembled, wide fread | 1 | |
| | | | | |

^{*}Omitted from plate.

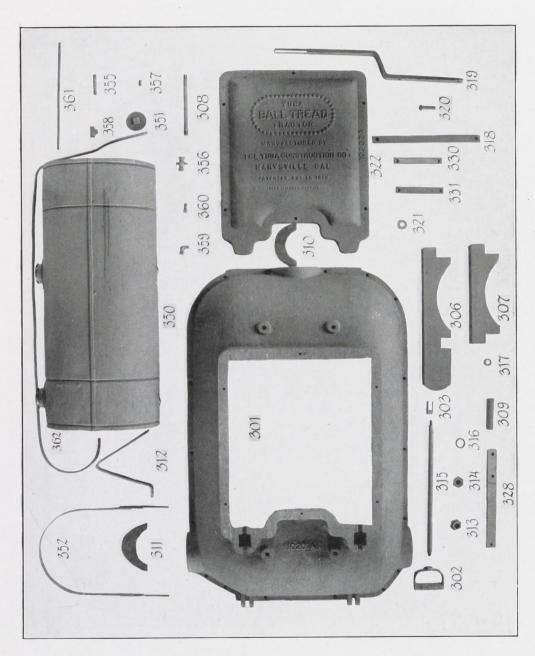


PLATE NO. 6—TRANSMISSION, FUEL TANK, SUPPORTS AND PIPING

TRANSMISSION, FUEL TANK, SUPPORTS AND PIPING

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|--|-------------------------------|----------------------|
| Bold | 301AB | Transmission case cover | 1 | 6 |
| Bomb | 302AB | Gear shifter handle | 1 | 6 |
| Bone ' | 303AB | Gear shifter rod end | 1 | 6 |
| Boom | 306 | Fuel tank wood seat, rear | | 6 |
| Boost | 307 | Fuel tank wood seat, front | 1 | 6 |
| Borax | 308AB | Fuel tank supporting stud | 1 | 6 |
| Bore | 309AB | Fuel tank supporting pipes | 4 | 6 |
| Born | 310AB | Transmission case cover felt washer for cross shaft | 4 | 6 |
| Bound | 311AB | Transmission case cover felt washer for drive shaft | 2 | 6 |
| Bowl | 312AB | Tool box support strap | 1 | 6 |
| Boxer | 313AB | Gear shifter stuffing boy | 2 | 6 |
| brace | 314AB | Gear shifter stuffing box. Gear shifter gland nut. | 1 | 6 |
| rain | 315AB | Gear shifter giand nut | 1 | 6 |
| rake | 316AB | Gear shifter shaft | 1 | 6 |
| rand | 317AB | Gear shifter washer. | 2 | 6 |
| rave | 318AB | Gear shifter washer | 1 | 6 |
| read | 319AB | Clutch lever link | 2 | 6 |
| rew | 320AB | Clutch lever | 2 | 6 |
| ribe | 321AB | Clutch lever pin | 2 | 6 |
| rick | 322AB | Fuel tank supporting stud washer | 4 | 6 |
| ride | 323AB | Transmission case cover cap | 1 | 6 |
| rine | 324 324 | Gear shifter grease cap | 1 | * |
| rink | 325AB | Gear shifter fork | 1 | 4 |
| risk | 326AB | Gear shifter felt gasket for grease cap | 1 | * |
| road | | Gear shifter lock pin | 1 | * |
| room | 327AB | Gear shifter spring for lock pin | 1 | * |
| roth | 328AB | Gear shifter lever | 1 | 6 |
| row | 329 | Gear shifter rod. | 1 | * |
| | 330 | Gear shifter link | 1 | 6 |
| rute | 331 | Gear shifter link (tapped) | 1 | 6 |
| uck | 332AB | Gear shifter ctsk. 1½" pipe plug. | 1 | * |
| uff | 334AB | Gear shifter taper pin 2" long, Morse No. 5 | 1 | * |
| uggy | 350 | Fuel tank assembly complete | 1 | 6 |
| ugle | 351AB | Fuel tank bronze filler cap | 2 | 6 |
| uild | 352 | Fuel tank strap with bolts | 2 | 6 |
| ulb | 355AB | • Fuel tank nipple ¼"x3" | 2 | 6 |
| ump | 356AB | Fuel tank lever handle spring 1/4" keycock | 2 | 6 |
| urn | 357AB | Fuel tank close nipples 1/4" | 1 | 6 |
| urst | 358AB | Fuel tank tee ¼" | 1 | 6 |
| ush | 359AB | Fuel tank compression coupling elbow | 2 | 6 |
| usy* | 360AB | Fuel tank compression coupling | 1 | 6 |
| axom | 361 | Fuel tank pipe copper tube, No. 20 ga. 3/8"x16" long | 1 | 6 |
| /way | 362 | Fuel tank pipe copper tube, No. 20 ga. 3/8"x5" | 1 | 6 |
| | | | - | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

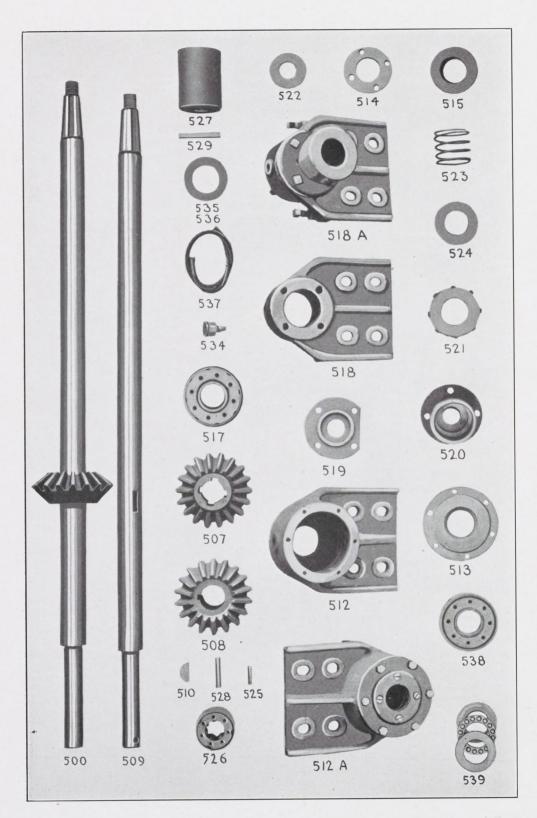


PLATE NO. 7—PULLEY SHAFT

PULLEY SHAFT

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|---------------|----------------|--|-------------------------------|----------------------|
| Chap | 500 | Pulley shaft assembly | 1 | 7 |
| Charm | 507 | Engine shaft mitre gear | 1 | 7 |
| Chase | 508 | Pulley shaft mitre gear | 1 | 7 |
| Cheap | 509 | Pulley shaft | 1 | 7 |
| Check | 510AB | Pulley shaft key Woodruff, No. G 3/8"x1½". | 1 | 7 |
| Cheer | 1-512 | Pulley shaft bearing housing, L. H. (pulley end) assembled complete | | |
| Chew | 512 | | 1 | 7 |
| Chide | 513 | Pulley shaft bearing housing, L. H. (pulley end) | 1 | 7 |
| | | Pulley shaft bearing, dust cover, L. H. (pulley end) | 1 | 7 |
| Child | 514 | Pulley shaft, L. H. (pulley end) bearing, dust washer | 2 | 7 |
| Chin Chink | 515 517 | Pulley shaft, L.H. (pulley end) bearing, dust leather washer. Pulley shaft, L.H. (pulley end) Hyatt roller bearing No. | 2 | 7 |
| Chirp | 1-518AB | 27178 Pulley shaft bearing housing, R. H. assembled complete | 1 | 7 |
| 21 . | 51045 | (crank end) | 1 | 7 |
| Choir | 518AB | Pulley shaft bearing housing, R. H. (crank end) | 1 | 7 |
| Chop | 519AB | Pulley shaft, R. H. (crank end) bearing, dust cover | 1 | 7 |
| Chore | 520AB | Pulley shaft, R. H. (crank end) bearing, spring housing | 1 | 7 |
| Chum | 521AB | Pulley shaft, R. H. (crank end) bearing, spring housing cover | 1 | 7 |
| City | 522AB | Pulley shaft, R. H. (crank end) bearing, dust washer | 2 | 7 |
| Clack | 523AB | Pulley shaft, R. H. (crank end) bearing, starting crank spring. | 1 | 7 |
| Clam | 524AB | Pulley shaft, R. H. (crank end) pearing, dust felt washer. | 1 | |
| Clay | 525AB | Pulley shaft, R. H. (crank end) bearing, dowel | 1 | 7 |
| Clean | 526AB | Pulley shaft, R. H. (crank end) Bearing, dower. Pulley shaft, R. H. (crank end) Hyatt roller bearing No. 19195. | 1 | 7 |
| Clerk | 527AB | | 1 | . 7 |
| Clew | 528AB | Pulley shaft, end protector | 1 | 7 |
| | | Pulley shaft, pin for starting crank | 1 | 7 |
| Climb | 529AB | Pulley shaft, end protector key | 1 | 7 |
| Clog Cloud | 534AB 535 | Pulley shaft grease cupPulley shaft, thrust washer on engine crankshaft for mitre | 2 | 7 |
| Clove | 536 | gearPulley shaft, thrust washer on engine crankshaft for mitre | 1 | 7 |
| | | gear | 1 | 7 |
| Cobra | 537 | Pulley shaft, flax packing 3/8"x3/8"x12" | 1 | 7 |
| Coin | 538 | Pulley shaft, Hyatt roller brg. in motor housing No. 27127 | 2 | 7 |
| Cold | 539 | Pulley shaft, ball thrust bearing in motor housing "Maiden" | 1 | 7 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

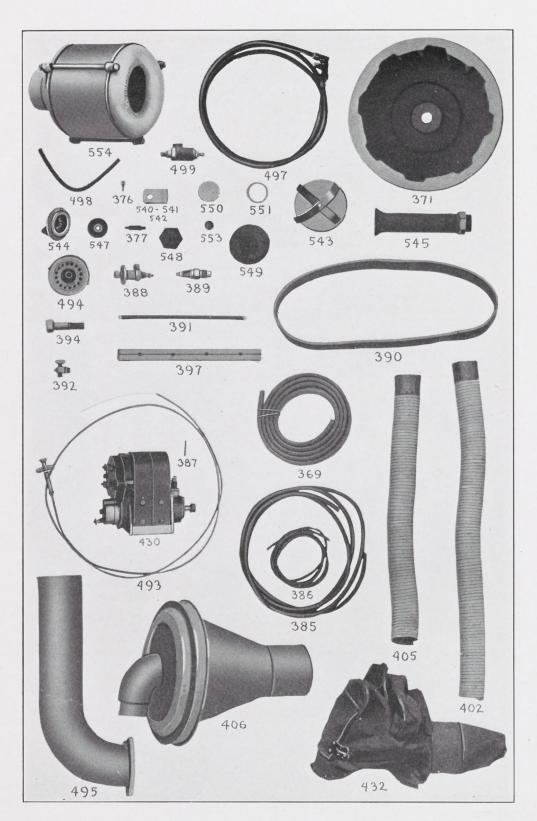


PLATE NO. 8—MOTOR FITTINGS

MOTOR FITTINGS

| Cab | Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|--------------------------|--|-------------------------------|----------------------|
| - 1 | 369AB | Flexible coupling engine to transmission belt 7'x3" | 1 | 8 |
| Cabin | 371 | Motor, coupling flange, outside | 1 | 8 |
| Cable | 374 | Motor, elbow for water circulating pump | 1 | 20 |
| Cadet | 376AB | Motor, wire holder on carburetor throttle | 1 | 8 |
| Cage | 377 | Motor, collar bolt for cable spacer | 2 | 8 |
| Cake | 385 | High tension magneto cable 12' long | 1 | 8 |
| Calf | 386 | Low tension magneto cable 8' long | 1 | 8 |
| Call | 387AB | Bosch terminal | 1 | 8 |
| Calm | 388AB | Magneto switch | 1 | 8 |
| Camel | 389AB | Spark plug ½" pipe thread | 4 | 8 |
| Camp | 390 | Fan belt, endless leather 2"x43½" | 1 | 8 |
| Canal | 391AB | Spring for carburetor | 1 | 8 |
| Candy | 392 | Drain cock brass ¼" | 3 | * |
| Cane | 394 | Motor bolt | 1 | 8 |
| Card | 397 | High tension cable spacer | 1 | 8 |
| Cargo | 400 | Clarifier | 1 | 8 |
| Carry | 402 | Clarifier, flexible tubing, clarifier to heater | 1 | 8 |
| Carve | 405 | Clarifier, flexible tubing, clarifier to carburetor | 1 | 8 |
| Cash | 430 | Bosch DU4 magneto, counter clockwise | 1 | 8 |
| Catch | 432AB | Bosch canvas magneto cover | 1 | 8 |
| Caulk | 493 | Stromberg air control | 1 | 8 |
| Cave | 494 | Newton automatic advancing coupling, counter clockwise | 1 | 8 |
| Cavil | 495 | Exhaust elbow Y | 1 | |
| Cease | 496 | Oil pipe, engine to oil gauge 3/8"x3' 2" | 1 | 8 |
| Cell | 497 | Oil pipe, engine to oil gauge $\frac{3}{8}$ "x5' 2" | 1 | ** |
| Chain | 498 | Oil pipe, engine to oil gauge $\frac{9}{8}$ x7 Z | 1 | 8 |
| Chant | 499 | Oil relief valve ¼" Lunkenheimer No. 100, No. 202 | 1 | |
| Colon | 540 | Clip for fuel pipe | 1 | 8 |
| Coma | 541 | Clip for air control on tank seat | 1 | 8 |
| Comet | 542 | Clip for air control on motor support | . 1 | 8 |
| Comic | 543 | Exhaust pipe cap | 1 | 8 |
| Cone | 544 | Oil gauge, Tell-Tale type, complete. | 1 | 8 |
| Cook | 545 | Breather body | | 8 |
| Cope | 546 | Breather stud. | 1 | 8 |
| Coral | 547 | Breather valve. | 1 | |
| Cord | 548 | Breather plug. | 1 | 8 |
| Cosset | 549 | | 1 | 8 |
| 203600 | | Breather cap. | 1 | 8 |
| | | | 1 | 8 |
| | | | 1 | 8 |
| | | | 1 | |
| | 554 | Yuba Spark Arrester | 1 | 8 |
| | 550 551 553 554 | Tell Tale Oil indicator glass Tell Tale Oil indicator glass gasket Tell Tale Oil indicator whirligig Yuba Spark Arrester | 1 1 1 1 | |

^{*}Omitted from plate.

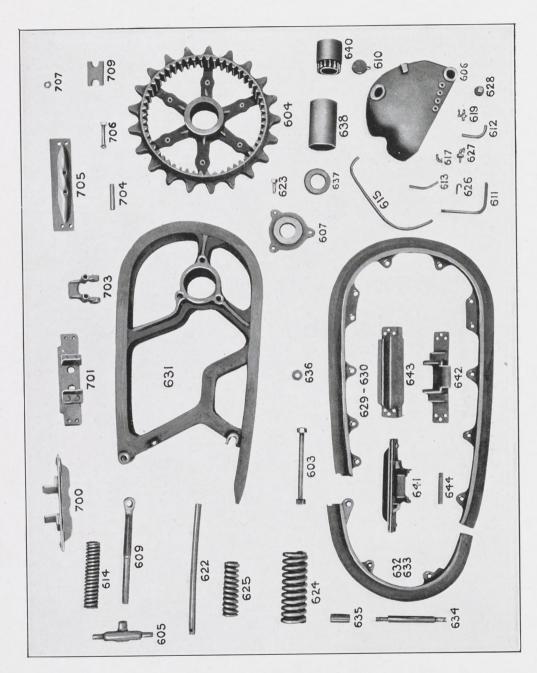


PLATE NO. 9-BALL RACE AND TREAD

BALL RACE AND TREAD

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|-------|----------------|---|-------------------------------|----------------------|
| Couch | 603 | Ball tread race hinge bolt | 2 | 9 |
| Could | 604A | Track sprocket | 2 | 9 |
| Count | 605 | Track adjusting spring, yoke | 2 | 9 |
| Cover | 606 | Track oil box | 2 | 9 |
| | 607AB | Track sprocket hub plug | 4 | 9 |
| Cowl | 609 | Track adjusting rod | 2 | 9 |
| Crab | | Track oil box cover | 4 | 9 |
| Crack | 610AB | Track oil pipe to inside raceway | 2 | 9 |
| Craft | 611 | Track oil pipe to inside raceway | 2 | 9 |
| Cramp | 612 | Track oil pipe to tread chain | 2 | 9 |
| Crave | 613 | Track of pipe to tread chain. Track adjusting spring 25/8"x12" | 2 | 9 |
| Crawl | 614A · | | 2 | 9 |
| Crew | 615 | Track oil pipe to sprocket | 8 | 9 |
| Crib | 617AB | | 8 | 9 |
| Crime | 619AB | Track oil pipe lever handle cock | 2 | 9 |
| Crisp | 622A | Track supporting spring yoke shaft | 4 | 9 |
| Crock | 623AB | Track sprocket set screw | 2 | 9 |
| Crude | 624A | Track supporting spring, outside 4\[4\] "x12\[\frac{1}{2}\]" | | |
| Crust | 625A | Track supporting spring, inside 3/4 "x91/2" | 2 | 9 |
| Cubit | 626A | Track oil pipe hook bolt | 2 | 9 |
| Cuff | 627A | Track oil pipe, ¼" R. R. union elbow | 8 | 9 |
| Curb | 628A | Track oil box 1½" pipe plug | 2 | 9 |
| Curse | 629 | Ball tread R. H. rear raceway | 2 | 9 |
| Cut | 630 | Ball tread L. H. rear raceway | 2 | 9 |
| Cycle | 631 | Ball tread race spider | 2 | 9 |
| Damp | 632 | Ball tread R. H. front raceway | 2 | 9 |
| Dane | 633 | Ball tread L. H. front raceway | 2 | 9 |
| Darn | 634 | Ball tread race, rod bolt front raceway | 2 | 9 |
| Dash | 635 | Ball tread race, pipe spacers for rod bolt | 2 | 9 |
| Date | 636 | Ball tread race, filler washers for bolts in raceways | | 9 |
| Dawn | 637A | Track sprocket, end plates for hub bushings | 2 | 9 |
| Davii | 638A | Track sprocket, hub bushing | 2 | 9 |
| Deal | 639A | Track sprocket, dowels for hub bushing | 16 | * |
| | 640A | Track sprocket, Hyatt roller bearing No. 18725 | 4 | 9 |
| Decay | 1-641A | Track chain assembled complete (boltless type) with pins. | 2 | * |
| Deck | 641A | Tread, complete, boltless type | 80 | 9 |
| Deed | | Tread, inside plate, boltless type | 80 | 9 |
| Delta | 642A | Tread, outside plate (grouser), boltless type | 80 | 9 |
| Demon | 643A | Tread pin for boltless tread | 80 | 9 |
| Dent | 644A | Track chain, assembled complete with links and pins | 2 | * |
| Desk | 1-700A | Tread assembled complete, bolt type | 80 | 9 |
| Dew | 700A | Tread, inside tread plate with angles, bolt type | 80 | 9 |
| Dial | 701A | | 80 | 9 |
| Dice | 703A | Tread link, bolt type | 80 | 9 |
| Diet | 704A | Tread link pin, bolt type | | 9 |
| Digit | 705A | Tread plate, outside (grouser), bolt type | 80 | 9 |
| Dike | 706A | Tread bolt (carriage 5% "x41/8") | 160 | 9 |
| Dim | 1-706A | Tread bolt (carriage 5% "x43%") | 160 | 0 |
| Dint | 707AB | Track bolt, 5/8" spring washer | 160 | 9 |
| Dip | 709A | Track link shim, bolt type | 80 | 9 |
| | | Track Ball 21/4 in. | 260 | * |
| | | Track Ball 2 4-16 in. | 260 | * |
| | | Track Ball 23% in. | 260 | * |
| | | Track Dan 478 III. | | |

^{*}Omitted from plate.

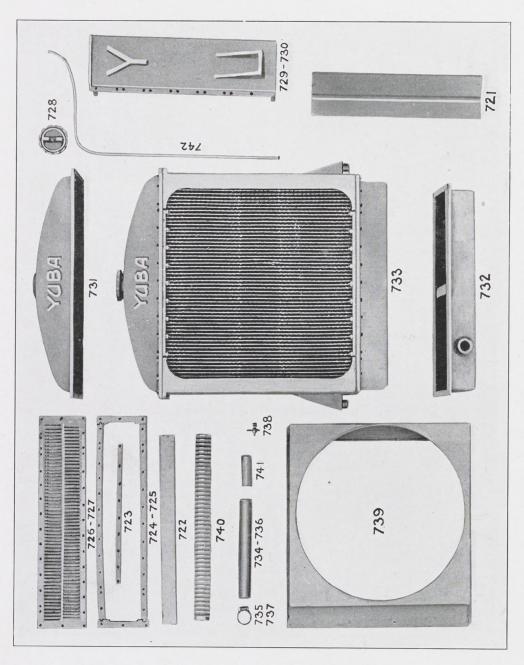


PLATE NO. 10-RADIATOR AND FITTINGS

RADIATOR AND FITTINGS

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|---------|----------------|--|-------------------------------|----------------------|
| Dire | 721A | Radiator, filler | 2 | 10 |
| Dish | 722A | Radiator, tubes (brass) | 115 | 10 |
| Ditch | 723 | Radiator bars | 4 | 10 |
| Dive | 724A | Radiator, top gasket (4 pieces) | 1 | 10 |
| Dock | 725A | Radiator, bottom gasket (4 pieces) | 1 | 10 |
| Dol1 | 726A | Radiator, bottom tube plate | 1 | 10 |
| Dome | 727A | Radiator, top tube plate | 1 | 10 |
| Dory | 728A | Radiator, filler cap | 1 | 10 |
| Dot | 729A | L. H. Radiator column | 1 | 10 |
| Dove | 730A | R. H. Radiator column | 1 | 10 |
| Draft . | 731A | Radiator, top tank | 1 | 10 |
| Drag | 732A | Radiator, bottom tank | 1 | 10 |
| Drain | 733A | Radiator, assembled complete | 1 | 10 |
| Dram | 734 | Radiator, inlet hose (top) 1½"x14½" | 1 | 10 |
| Drape | 735 | Radiator, inlet hose band 11/4", 4 ply | 2 | 10 |
| Dress | 736 | Radiator, outlet hose (bottom) | 1 | 10 |
| Drift | 737 | Radiator, outlet hose band 1½", 3 ply | 2 | 10 |
| Drip | 738A | 1/4" Radiator drain cock | 1 | 10 |
| Drum | 739 | Radiator, fan housing | 1 | 10 |
| Duel | 740A | Radiator, honeycomb for spacing | 117 | 10 |
| Dupe | 741A | Radiator, inlet and outlet nipple | 1 | 10 |
| Ear | 742A | Radiator, overflow pipe 3/8"x47" | 1 | 10 |
| Earl | 743A | Radiator, tubes and top and bottom sheets, assembled | 1 | * |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

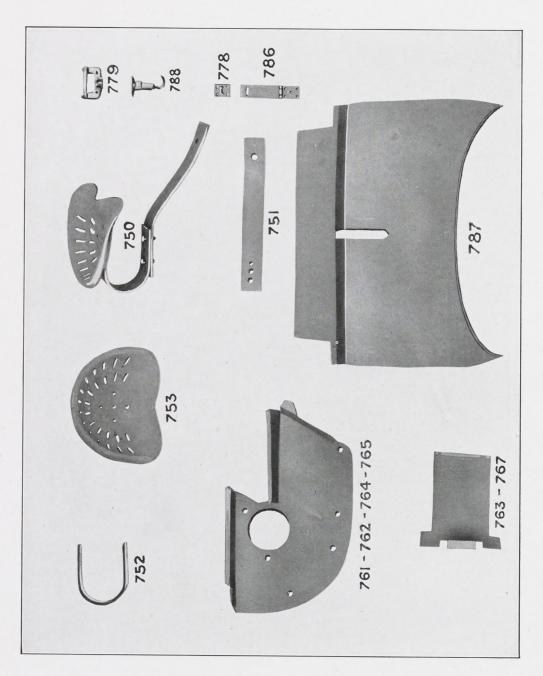


PLATE NO. 11—HOOD, GUARDS AND SEAT

HOOD, GUARDS AND SEAT

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|-------------------------------------|-------------------------------|----------------------|
| Earth | 750AB | Seat and spring assembly | 1 | 11 |
| Ease . | 751AB | Seat support | 1 | 11 |
| Ebony | 752AB | Seat support extension | 1 | 11 |
| Echo | 753AB | Seat | 1 | 11 |
| Edge | 761 | Ball race, L. H. mud guard, outside | 1 | 11 |
| Edit | 762 | Ball race, L. H. mud guard, inside | 1 | 11 |
| Egg | 763 | Ball race, L. H. dust cover | 1 | 11 |
| Elder | 764 | Ball race, R. H. mud guard, outside | 1 | 11 |
| Elect | 765 | Ball race, R. H. mud guard, inside | 1 | 11 |
| Elk | 766 | Dust pan, main frame | 1 | * |
| Ember | 767 | Ball race, R. H. dust cover | 1 | 11 |
| Emend | 771 | Hood, side sheet, R. H | 1 | * |
| Emit | 772 | Hood, side sheet, L. H | 1 | * |
| Empty | . 773 | Hood, top sheet | 1 | * |
| Enemy | 774AB | Hood, stop block | 4 | * |
| Enter | 775 | Hood, side sheet stiffener | 4 | * |
| Envoy | 776AB | Hood, top sheet stiffener | 2 | * |
| Epic | 777 | Hood, hinge rod | 2 | * |
| Epoch | 778AB | Hood, staples for hinge hasp | 4 | 11 |
| Equip | 779AB | Hood handle | 4 | 11 |
| Erect | 780A | Hood back end, angle support | 1 | * |
| Erase | 781 | Hood back sheet | 1 | * |
| Erupt | 783A | Hood brace, horizontal | 1 | * |
| Etch | 784 | Hood brace, diagonal | 1 | * |
| Ether | 786AB | Hood hasp | 4 | 11 |
| Event | 787AB | Front wheel fender | 1 | 11 |
| Evoke | 788 | Hood clasp | 4 | 11 |

^{*}Omitted from plate.

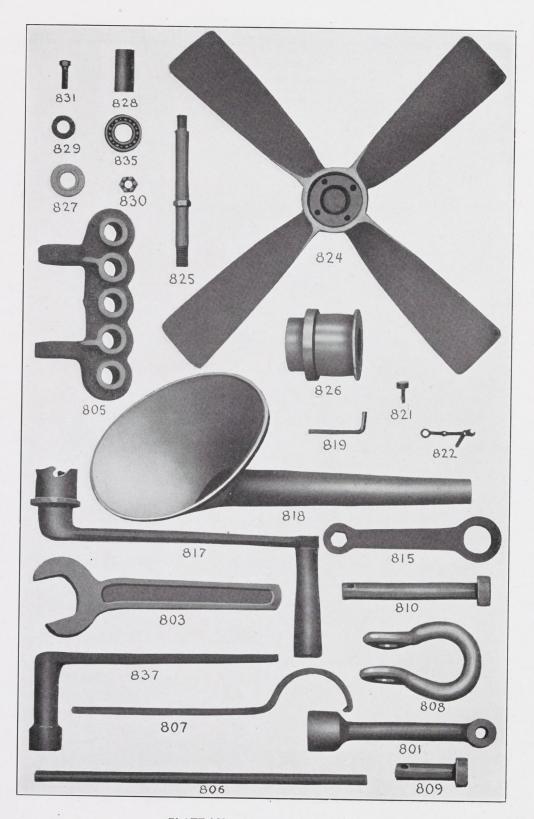


PLATE NO. 12—TOOLS AND FAN

TOOLS AND FAN

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|-----------|----------------|--------------------------------------|---|----------------------|
| wer | 800AB | Tool box | 1 | * |
| xcel | 801AB | Socket wrench for cross shaft nut 1" | 1 | 12 |
| xert | 802AB | Box wrench for 3/4" nuts | 1 | * |
| xtol | 803AB | Engineer's wrench for axle nut | 1 | 12 |
| xude | 805 | Drawbar hitch | 1 | 12 |
| xult | 806AB | Socket wrench rod | 1 | 12 |
| able | 807AB | Spanner wrench for gland | 1 | 12 |
| ice | 808 | Drawbar hitch clevis | 1 | 12 |
| aint | 809 | Drawbar pin 1"x53/4" | 1 | 12 |
| nith | 810 | Clevis bolt 1"x101/4" | 1 | 12 |
| ame | 811AB | Motorist tool kit | 1 | * |
| incy | 812AB | No. 13 oiler | 1 | * |
| ang | 813AB | No. 15 oiler | 1 | * |
| ite | 814AB | Pocket oiler | 1 | * |
| ivor | 815 | Port plug wrench | 1 | 12 |
| ast | 816AB | Grease gun | 1 | * |
| :11 | 817A | Starting crank | 1 | 12 |
| ence | 818AB | Offset funnel | 1 | 12 |
| nd | 819AB | Wrench for headless set screw | 1 | 12 |
| re | 820A | False link | 1 | * |
| rm | 821AB | Switch key | 1 | 12 |
| ag | 822AB | Magneto wrench | 1 | 12 |
| ake | 823 | Fan, complete assembly. | 1 | * |
| ame | 824 | Fan, blades | 1 | 12 |
| ank | 825 | Fan, shaft | 1 | 12 |
| at | 826 | Fan, pulley | 1 | 12 |
| lea | 827 | Felt retainer, complete | 1 | 12 |
| ed | 828 | Bearing spacer | 1 | 12 |
| esh | 829 | Fan shaft washer. | 1 | 12 |
| int | 830 | 3/4" cast. nut. | 1 | 12 |
| | 831 | 5 x1" Hex. cap screws. | 4 | 12 |
| og ood | 832 | | 4 | * |
| | 833 | 5 spring washer. | 1 | * |
| OSS | | Spring cotter 3/8"x11/4" | 1 | * |
| our | 834 | 1/8" std. pipe plug (square head) | 2 | 12 |
| ow | 835AB | Annular ball bearing | 2 | . 12 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | * | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | * | |

^{*}Omitted from plate.

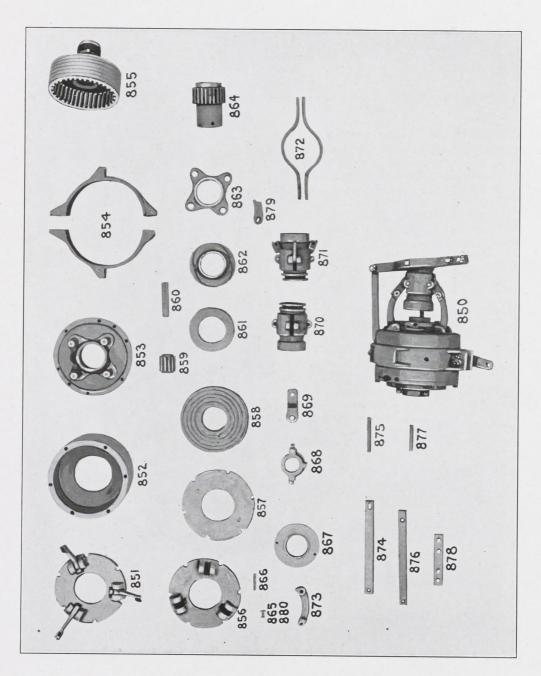


PLATE NO. 13—PARAGON CLUTCH

PARAGON CLUTCH

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|-------|----------------|---|-------------------------------|----------------------|
| Flute | 850AB | Paragon clutch, complete assembly | 2 | 13 |
| Fly | 851AB | Paragon clutch, finger disc with fingers | 2 | 13 |
| Foam | 852AB | Paragon clutch, case with friction disc pins | 2 | 13 |
| Fog | 853AB | Paragon clutch, cover with studs and bushings | 2 | 13 |
| Fold | 854AB | Paragon clutch, brake band (order two halves) sold in pairs | | |
| 2 11 | 0554D | only | 2 | 13 |
| olly | 855AB | Paragon clutch, propeller gear | 2 | 13 |
| ont | 856AB | Paragon clutch, finger disc | 2 | 13 |
| ood | 857AB | Paragon clutch, brass friction disc | 4 | 13 |
| Ford | 858AB | Paragon clutch, C. I. friction disc | 4 | 13 |
| orge | 859AB | Paragon clutch, pinion gear with bushing | 8 | 13 |
| orm | 860AB | Paragon clutch, stud for pinion gear | 8 | 13 |
| orth | 861AB | Paragon clutch, finger collar | 2 | 13 |
| ound | 862AB | Paragon clutch, check collar | 2 | 13 |
| OX | 863AB | Paragon clutch, pinion support | 2 | 13 |
| rail | 864AB | Paragon clutch, engine gear | 2 | 13 |
| rame | 865AB | Paragon clutch, toggle finger pin | 6 | 13 |
| ray | 866AB | Paragon clutch, finger disc pin | 6 | 13 |
| resh | 867AB | Paragon clutch, screw collar | 2 | 13 |
| ret | 868AB | Paragon clutch, collar for toggle sleeve | 2 | 13 |
| rog | 869AB | Paragon clutch, inclined lever | 2 | 13 |
| rost | 870AB | Paragon clutch, toggle sleeve | 2 | 13 |
| rown | 871AB | Paragon clutch, toggle sleeve with toggles | 2 | 13 |
| roze | 872AB | Paragon clutch, straps for toggle sleeve | 4 | 13 |
| ruit | 873AB | Paragon clutch, finger | 6 | 13 |
| udge | 874AB | Paragon clutch, upper connecting link | 2 | 13 |
| und | 875AB | Paragon clutch, key, front shaft | 2 | 13 |
| ury | 876AB | Paragon clutch, lower connecting link | 2 | 13 |
| use | 877AB | Paragon clutch, key for rear clutch shaft | 2 | 13 |
| uzz | 878AB | Paragon clutch, lever | 2 | 13 |
| Gable | 879AB | Paragon clutch, toggle link | 6 | 13 |
| Gage | 880AB | Paragon clutch, toggle link pin | 6 | 13 |
| Gain | 881AB | Paragon clutch, cap screws, cover to case | 12 | * |
| Gale | 882AB | Paragon clutch, cap screws, lower connecting links to straps | | |
| | | for toggle sleeve | 2 | |
| Game | 883AB | Paragon clutch, connecting links to brake band, cap screw | 2 | * |
| Garb | 884AB | Paragon clutch, inclined lever to brake band, cap screw | 2 | * |
| asp | 885AB | Paragon clutch, inclined lever to connecting links, cap screw | 2 | * |
| ate | 886AB | Paragon clutch, upper connecting link to lever, cap screw | 2 | * |
| Gavel | 887AB | Paragon clutch, dog for set collar | 4 | * |
| Gay | 888AB | Paragon clutch, 5/8" castellated nut | 4 | * |
| iem . | 889AB | Paragon clutch, ½" castellated nut | 10 | * |
| Giant | 890AB | Paragon clutch, set screw, engine gear or propeller gear | 4 | * |
| Gift | 891AB | Paragon clutch, special cap screw for screw collar | 4 | * |
| Glade | 892AB | Paragon clutch, bushing for cover | 2 | * |
| laze | 893AB | Paragon clutch, bushing for pinion gear | 8 | * |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

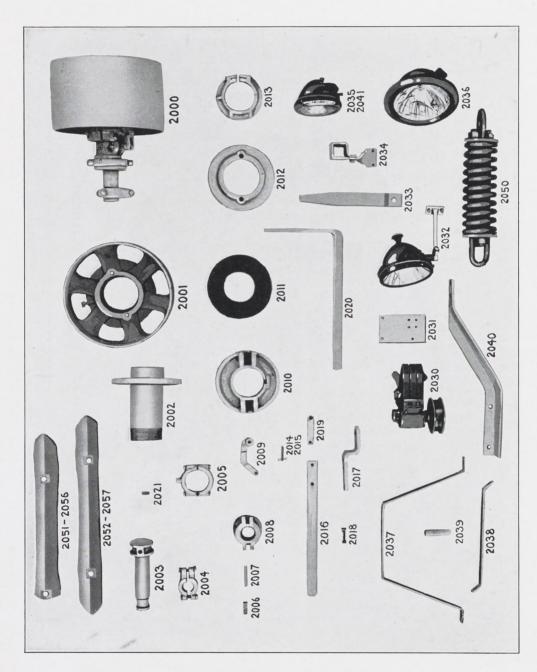


PLATE NO. 14 SPECIAL EQUIPMENT

SPECIAL EQUIPMENT

Note.—The piece marks given on this plate are only to be used when ordering direct from the Yuba Manufacturing Company or its agents.

| | Number | NAME OF PART | used per Tractor | Shown on Plate |
|--------|--------|---|---------------------|----------------------|
| Glide | 2000AB | Lemley clutch pulley, complete | 1 | 14 |
| Globe | 2001AB | Lemley clutch pulley, pulley only | 1 | 14 |
| Glory | 2002AB | Lemley clutch pulley, sleeve | 1 | 14 |
| Glove | 2003AB | Lemley clutch pulley, center shaft | 1 | 14 |
| Goal | 2004AB | Lemley clutch pulley, fulcrum | 1 | 14 |
| Gong | 2005AB | Lemley clutch pulley, thrust collar | 1 | 14 |
| Gourd | 2006AB | Lemley clutch pulley key (specify size desired) | 1 | 14 |
| Gorge | 2007AB | Lemley clutch pulley key 3/8"x3/8"x3" | 1 | 14 |
| Gouge | 2008AB | Lemley clutch pulley, sliding collar | 1 | 14 |
| Gown | 2009AB | Lemley clutch pulley, toggle with link | 2 | 14 |
| Grace | 2010AB | Lemley clutch pulley, friction plate (front) | 1 | 14 |
| Grade | 2011AB | Lemley clutch pulley, fibre friction ring | 2 | 14 |
| Graft | 2012AB | Lemley clutch pulley, friction plate (rear) | 1 | 14 |
| Grain | 2013AB | Lemley clutch pulley, adjusting ring | 1 | 14 |
| Grand | 2014AB | Lemley clutch pulley, pin for front friction plate | 2 | 14 |
| Grasp | 2015AB | Lemley clutch pulley, pin for sliding collar | 2 | 14 |
| Gray | 2016AB | Lemley clutch pulley, operating lever handle | 1 | 14 |
| Green | 2017AB | Lemley clutch pulley, operating lever forks | 2 | 14 |
| Grill | 2018AB | Lemley clutch pulley, operating lever bolt | 2 | 14 |
| Grime | 2019AB | Lemley clutch pulley, operating lever link | 1 | 14 |
| Grip | 2020AB | Lemley clutch pulley, operating lever support | 1 | 14 |
| Grist | 2021AB | Lemley clutch pulley, set screw for center | 1 | 14 |
| Grow | 2030AB | K. W. generator, type "L. S." with pulley | 1 | 14 |
| Gruel | 2031AB | K. W. generator, support | 1 | 14 |
| Guard | 2032AB | Spot light and bracket | | 14 |
| Guide | 2033AB | Bracket for side lamps | | 14 |
| Guild | 2034AB | Spot light support for canopy leg | | 14 |
| Guise | 2035AB | Side light, right hand | | 14 |
| Gulch | 2036AB | Headlight | 1 | 14 |
| Gum | 2037AB | Headlight, support | 1 | 14 |
| Gunny | 2038AB | Headlight, support brace | 2 | 14 |
| Gust | 2039AB | Headlight, support pipe spacer | 2 | 14 |
| Guy | 2040AB | Rear light angle support | | 14 |
| Habit | 2041AB | Side light, left hand | | 14 |
| Hack | 2042AB | Generator, belt 1"x6' 6" | 1 | * |
| Hail | 2043AB | Generator, belt lacing | | * |
| Hamlet | 2050A | Spring drawbar | | 14 |
| Hare | 2051 | Tread extensions for standard gauge tractor with boltless track | | 14 |
| Harsh | 2052 | Tread extensions for wide tread tractor with boltless tracks | | 14 |
| Haste | 2053 | Bolt for tread extension | | * |
| Hatch | 2054 | Washers for tread extension | | * |
| Haunt | 2055 | 5%" lock washers for tread extensions | | * |
| Haven | 2056 | Tread extensions for std. gauge with bolted treads | | 14 |
| Hawk | 2057 | Tread extensions for wide tread tractor with bolted treads | | 14 |
| lawk | | $\frac{5}{8}$ "x5 $\frac{1}{4}$ " bolt for tread extensions | | 4 |

^{*}Omitted from plate.

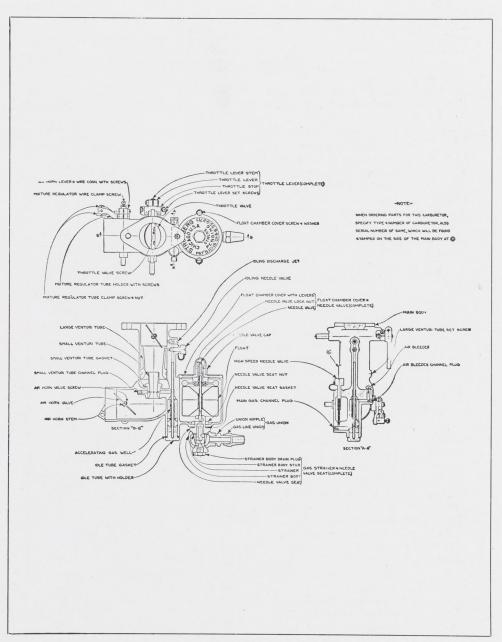


PLATE NO. 15—STROMBERG TYPE M-3 CARBURETOR

STROMBERG CARBURETOR, TYPE M-3—1½"

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|--|-------------------------------|----------------------|
| abber | 1001A | Air bleeder channel plug | 1 | 15 |
| ack | 1002A | Air bleeder | 1 | 15 |
| ade | 1003A | Air horn stem | 1 | 15 |
| ag | 1004A | Air horn valve | 1 | 15 |
| ail | 1005A | Air horn valve screw | 1 | 15 |
| am | 1006A | Accelerating gas well | 1 | 15 |
| apan | 1007A | Air horn lever and wire conn. with screws | 1 | 15 |
| ar | 1008A | Float | 1 | 15 |
| aunt | 1009A | Float chamber cover screw | 1 | 15 |
| ean | 1010A | Float chamber cover and needle valve (comp.) | 1 | 15 |
| elly | 1011A | Float chamber cover with lever | 1 | - 15 |
| erk | 1012A | Needle valve | 1 | 15 |
| est | 1013A | Needle valve lock nut | 1 | 15 |
| ewel | 1014A | Float chamber cover washer | 1 | 15 |
| ilt | 1015A | Gas strainer and needle valve seat (comp.) | 1 | 15 |
| ingle | 1016A | Needle valve seat | 1 | 15 |
| oin | 1017A | Strainer | 1 | 15 |
| oke | 1018A | Strainer body | 1 | 15 |
| olt | 1019A | Strainer body stud | 1 | 15 |
| udge | 1019A 1020A | Strainer body drain plug | 1 | 15 |
| 0 | 1020A 1021A | 1 0 | 1 | 15 |
| uice | | Gasoline union | | 15 |
| ump | 1022A | Union nipple | 1 | |
| une | 1023A | Gasoline union | 1 | 15 |
| ury | 1024A | High speed needle valve | 1 | 15 |
| Keel | 1025A | Idling discharge jet | 1 | 15 |
| Cept | 1026A | Idling needle valve | 1 | 15 |
| Kernel | 1027A | Idle tube with holder | 1 | 15 |
| Kick | 1028A | Idle tube gasket | 1 | 15 |
| Kind | 1029A | Large Venturi tube | 1 | 15 |
| Kite | 1030A | Large Venturi tube set screw | 1 | 15 |
| Knead | 1031A | Main body | 1 | 15 |
| Knife | 1032A | Main gas channel plug | 1 | 15 |
| Knock | 1033A | Needle valve cap | 1 | 15 |
| Label | 1034A | Needle valve seat nut | 1 | 15 |
| ace | 1035A | Needle valve gasket | 1 | 15 |
| Ladle | 1036A | Small Venturi tube | 1 | 15 |
| Lake | 1037A | Small Venturi tube gasket | 1 | 15 |
| ame | 1038A | Small Venturi tube channel plug | 1 | 15 |
| Lapel | 1039A | Mix. reg. tube holder with screws | 1 | 15 |
| atch | 1040A | Mix. reg. wire clamp screw | 1 | 15 |
| aud | 1041A | Mix. reg. tube clamp screw | 1 | 15 |
| ava | 1042A | Mix. reg. tube clamp nut | 1 | 15 |
| eap | 1043A | Throttle lever (complete) | 1 | 15 |
| egal | 1044A | Throttle lever | 1 | 15 |
| emon | 1045A | Throttle lever stem | 1 | 15 |
| ick | 1046A | Throttle stop | 1 | 15 |
| ife | 1047A | Throttle lever set screw | 1 | 15 |
| imit | 1048A | Throttle valve | 1 | 15 |
| inger | 1049A | Throttle valve screw | 1 | 15 |
| oaf | 1050A | Season air adjustment attaching screw | 1 | 15 |
| odge | 1051A | Straight season air adjustment | i | 15 |
| ofty | 1051A 1052A | Season air adjustment shutter | 1 | 15 |
| | 1052A 1053A | Season air adjustment snutter | 1 | 15 |
| ogic | | | 1 | 15 |
| ore | 1054A | Season air lock bushing | 1 | 15 |
| oyal | 1055A | Elbow season air adjustment | * | |
| uck | 1056A | Season air adj. shutter | 1 | 15 |
| unch | 1057A | Season air adj. lock screw | 1 | 15 |
| Lusty | 1058A | Season air adj. elbow | 1 | 15 |
| vnx | 1059A | Large Venturi set screw nut | 1 | 15 |

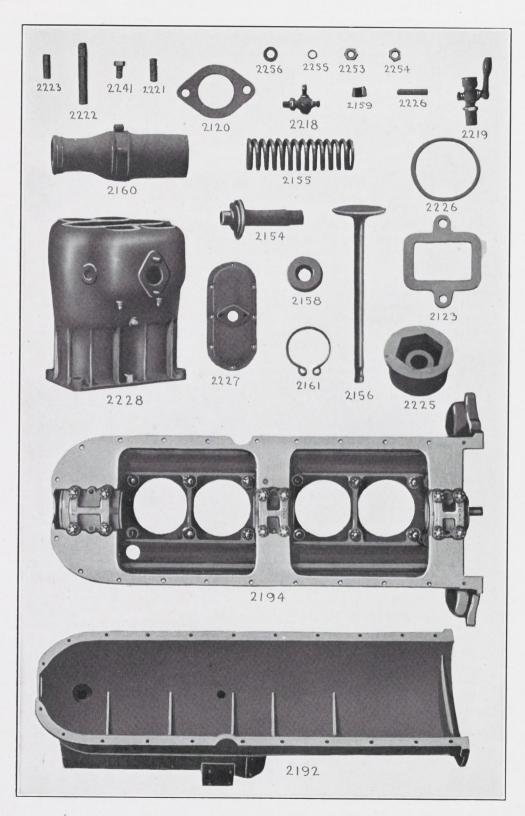


PLATE NO. 16—CYLINDER AND CRANKCASE ASSEMBLIES

CYLINDER AND CRANKCASE ASSEMBLIES

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|----------|----------------|--|-------------------------------|----------------------|
| Mace | 2120 | Gasket for inlet manifold | 2 | 16 |
| Madam | 2122 | Gasket for exhaust manifold elbow | 1 | * |
| Magic | 2123 | Gasket for exhaust manifold cloow. | 2 | |
| Maid | 2154 | Valva atom guida | 8 | 16 |
| Major | 2155 | Valve spring | - | 16 |
| Malice | 2156 | Valve typegeton et cell rich exhaust | 8 | 16 |
| | | Valve, tungsten steel, rich exhaust | 4 | 16 |
| Malt | 2157 | Valve, inlet, Ni. ch | 4 | * |
| Mania | 2158 | Valve spring seat | 8 | 16 |
| Mantel | 2159 | Valve spring seat bushing | 16 | 16 |
| Marble | 2160 | Valve spring cover | 8 Pr. | 16 |
| March | 2161 | Spring clip for valve spring cover | 8 | 16 |
| Marsh | 2192 | Crank case, lower cover | 1 | 16 |
| Mask | 2194 | Crank case with caps, bolts, studs, and shims | 1 | 16 |
| Matron | 2218 | 1/8" drain cock | 3 | 16 |
| Maxinı | 2219 | 1/4" priming cock | 4 | 16 |
| Maze | 2220 | Studs for priming cocks | 4 | 16 |
| Meal | 2221 | Stud, 3/8"x11/8" S. A. E | 4 | 16 |
| Melon | 2222 | Stud, ⁷ / ₁₆ "x3" S. A. E | 4 | 16 |
| Mercy | 2223 | Stud, 3/8"x11/4" S. A. E | 4 | 16 |
| Mica | 2224 | Stamped plug for cylinder | . 0 | * |
| Mild | 2225 | Valve cover | 8 | 16 |
| Minic | 2226 | Valve cover gasket | 8 | 16 |
| Mirior | 2227 | Cylinder cover | 2 | 16 |
| Minx | 2228 | Cylinders with valve, stem guides and studs | 2 | 16 |
| Mirth | 2229 | | 2 | 10 |
| VIII (II | 2229 | Cylinders with tungsten steel valves, springs, spring seats, | 2 | * |
| Miser | 2241 | gaskets, valve covers, etc | | |
| | 2241 | Front cover bolts | 14 | 16 |
| Misty | 2253 | Plain nut for priming cup stud | | 16 |
| Mite | 2254 | Plain nut for exhaust manifold | | 16 |
| Moan | 2255 | Spring lockwasher, 3/8" | | 16 |
| Moist | 2256 | Spring lockwasher, ⁷ / ₁₆ " | | 16 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | - | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

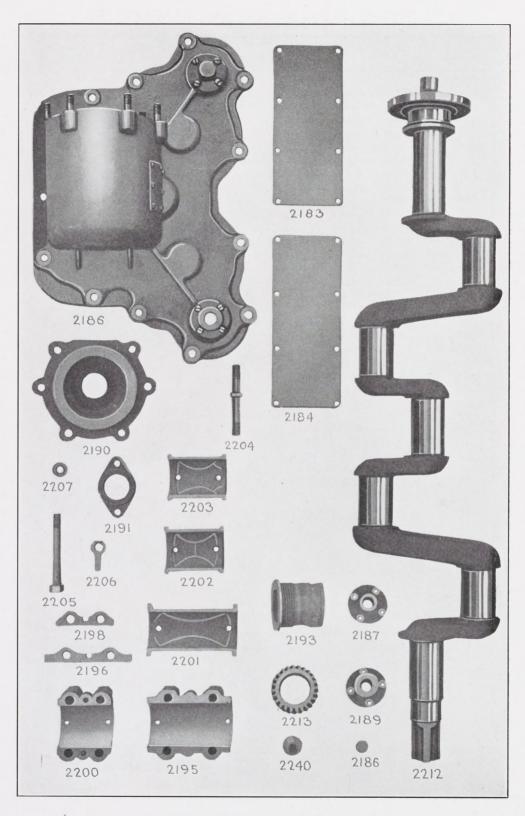


PLATE NO. 17—CRANKSHAFT ASSEMBLY

CRANKSHAFT ASSEMBLY

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|---|-------------------------------|----------------------|
| Molt | 2183 | Inspection plate, 11½" long. | 1 | 17 |
| Monk | 2184 | Inspection plate, 12½" long | 1 | 17 |
| Aoose. | 2186 | Crank case, front cover | 1 | 17 |
| Aoral | 2187 | Crank case, front cover bushing 3/4" hole. | 1 | 17 |
| Nouth | 2188 | Plug for front cover bushing | 1 | 17 |
| ∕luff | 2189 | Front cover bushing 7/8" hole | 1 | 17 |
| Aule | 2190 | Bearing cage for front cover | 1 | 17 |
| Aurky | 2191 | Gland for front cover | 2 | 17 |
| Aute | 2193 | Oil strainer and plug for lower crank case cover | 1 | 17 |
| Ayth | 2195 | Rear main bearing cap | 1 | 17 |
| Vasal | 2196 | Rear main bearing shim, thick | 2 | 17 |
| Vation | 2197 | Rear main bearing shim, thin | 12 | * |
| Javy | 2198 | Front and center main bearing shim, thick | 2 ea. | 17 |
| Veck | 2199 | Front and center main bearing shim, thin | 12 ea. | * |
| Vegro | 2200 | Front and center main bearing cap | 1 ea. | 17 |
| Verve | 2201 | Rear main bearing | 1 | 17 |
| Night | 2202 | Center main bearing | 1 | 17 |
| Voble | 2203 | Front main bearing | 1 | 17 |
| Notch | 2204 | Cylinder hold-down stud | 12 | 17 |
| Novel | 2205 | Main bearing bolt | 12 | 17 |
| Jurse | 2206 | Special lock washer for main bearing bolt | 12 | 17 |
|)ak | 2207 | Washer for cylinder hold-down studs | 12 | 17 |
| bey | 2208 | Stud for holding valve tappets, $\frac{5}{16}$ "x1" S. A. E | 16 | * |
| Ocean | 2209 | Stud for oil pump | 8 | * |
| live | 2210 | Stud, 3/16"x134" S. A. E | 4 | * |
| men | 2211 | Stud, ½"x17/8" S. A. E | 6 | * |
| nion | 2212 | Crankshaft | 1 | 17 |
| nyx | 2213 | Crankshaft gear | 1 | 17 |
| pal | 2235 | Dowel pin for main bearing cap | 6 | * |
| ptic | 2237 | Copper washer for main bearing bolt | 16 | * |
| Oral | 2238 | Bearing lock screw | 28 | * |
| Organ | 2240 | Plug for rear cam shaft bearing | 1 | 17 |
| | | | | |
| | | | , | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | - | |
| | | | | |
| | | | 9 | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |

^{*}Omitted from plate.

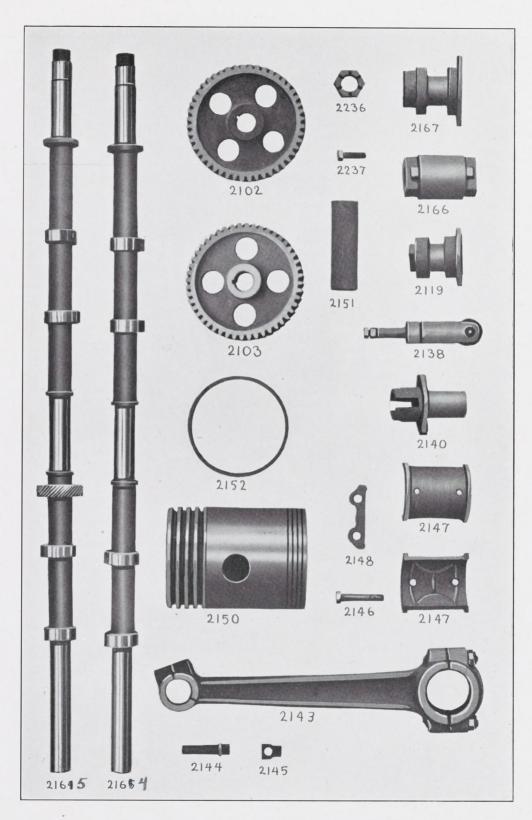


PLATE NO. 18—CAMSHAFT AND PISTON ASSEMBLIES

CAMSHAFT AND PISTON ASSEMBLIES

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|---|-------------------------------|----------------------|
| Otter | 2102 | Exhaust cam shaft gear | 1 | 18 |
| Oval | 2103 | Inlet cam shaft gear | 1 | 18 |
| Owl | 2119 | Front cam shaft bearing | 2 | 18 |
| Oxen | 2137 | Valve tapper adjusting screw | 8 | 18 |
| Pack | 2138 | Valve tapper with roller, pin and screw | 8 | 18 |
| Palm | 2140 | Valve tapper guide | 8 | 18 |
| Palsy | 2143 | Connecting rod with bearings | 4 | 18 |
| Panel | 2144 | Connecting rod clamp screw for upper end | 4 | 18 |
| Parch | 2145 | Special lockwasher for connecting rod clamp screw | 4 | 18 |
| Party | 2146 | Connecting rod bearing bolt | 16 | 18 |
| Patch | 2147 | Connecting rod bearing | 4 | 18 |
| Patrol | 2148 | Connecting rod bearing shims, thick | 8 | 18 |
| Pave | 2149 | Connecting rod bearing shims, thin | 48 | * |
| Peach | 2150 | Piston | 4 | 18 |
| Pecan | 2151 | Wrist pin | 4 | 18 |
| Peck | 2152 | Piston ring, R. H. cut | 8 | 18 |
| Pedal | 2153 | Piston ring, L. H. cut | 8 | * |
| Penny | 2164 | Exhaust cam shaft | 1 | 18 |
| Phase | 2165 | Inlet cam shaft | 1 | 18 |
| Pick | 2166 | Center cam shaft bearing | 2 | 18 |
| Pier | 2167 | Rear cam shaft bearing | 2 | 18 |
| Pigmy | 2236 | Nut for cam shaft gear | 2 | 18 |
| Pike | 2239 | Lock screw for center camshaft bearing | 2 | * |
| | | | | |
| | | | | |

^{*}Omitted from plate.

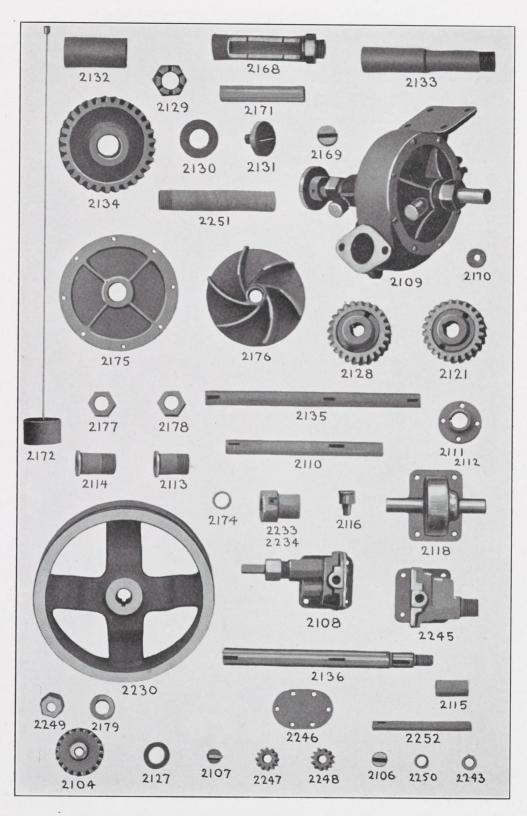


PLATE NO. 19—OIL PUMP AND WATER PUMP ASSEMBLIES

OIL PUMP AND WATER PUMP ASSEMBLIES

| | Number | NAME OF PART | used per Tractor | on Plate |
|--------|--------|---|---------------------|-------------|
| Pilot | 2104 | Oil pump spiral gear | 1 | 19 |
| Pine | 2105 | Upper oil pump shaft | 1 | * |
| Pitch | 2106 | Oil pump Oldham coupling | 1 | 19 |
| Placid | 2107 | Coupling flange for 2106. | 2 | 19 |
| Plank | 2108 | Oil pump, assembled without strainer | 1 | 19 |
| Plate | 2109 | Centrifugal water pump assembled | 1 | 19 |
| Plod | 2110 | Water pump rotor shaft | 1 | 19 |
| | | | 1 | |
| Plum | 2111 | Water pump coupling flange, 3/4" hole | | 19 |
| Poem | 2112 | Water pump coupling flange, 7/8" hole | 1 | 19 |
| Poke | 2113 | Front water pump bushing | 1 | 19 |
| Polka | 2114 | Rear water pump bushing | 1 | 19 |
| Pond | 2115 | Pump rotor spacing sleeve | 1 | 19 |
| Pork | 2116 | 1/8" grease cup | 2 | 19 |
| Post | 2118 | Oil pump shaft bracket | 1 | 19 |
| Prefix | 2121 | Water pump drive gear 1/8" hole | 1 | 19 |
| Prim | 2126 | Gasket for water pipes | 6 | * |
| Prize | 2127 | Washer for water pump drive shaft | 1 | 19 |
| Proxy | 2128 | Magneto drive gear, ¾" hole | 1 | 19 |
| Prune | 2129 | Nut for idler stud | 1 | 19 |
| Puff | 2130 | Idler stud washer | 1 | 19 |
| Pupil | 2131 | Idler stud screw | 1 | 19 |
| Rabbi | 2132 | Idler gear bushing | 1 | 19 |
| Rack | 2133 | Idler stud | 1 | 19 |
| Raft | 2134 | Idler gear with bushing | 1 | 19 |
| Rain | 2135 | Magneto drive shaft, 3/4 " dia | 1 | 19 |
| Range | 2136 | Water pump drive shaft 7/8" dia | 1 | 19 |
| Ration | 2168 | Oil gage, assembled, complete | 1 | 19 |
| Realm | 2169 | Plug for oil gage frame | 1 | 19 |
| Rector | 2170 | Oil gage gasket | 2 | 19 |
| Regal | 2171 | Oil gage glass | 1 | 19 |
| | | | 1 | 19 |
| Relic | 2172 | Oil gage float | 2 | 19 |
| Rent | 2174 | Water pump gland | | |
| Resin | 2175 | Water pump cover, 3/4" hole | 1 | 19 |
| Revel | 2176 | Water pump rotor | 1 | 19 |
| Rice | 2177 | Water pump gland nut, 11/8" thread L. H | 1 | 19 |
| Ride | 2178 | Water pump gland nut, 11/8" thread R. H | 1 | 19 |
| Risk | 2179 | Water pump shaft collar | 1 | 19 |
| Rival | 2180 | Water pump case | 1 | * |
| Robe | 2230 | Fan pulley (driver) | 1 | 19 |
| Rock | 2233 | Magneto drive shaft bushing | 1 | 19 |
| Rose | 2234 | Water pump drive shaft bushing, 7/8" hole | 1 | 19 |
| Royal | 2242 | Fibre washer for oil gage | 1 | * |
| Ruby | 2243 | Oil pump shaft collar | 1 | 19 |
| Rule | 2245 | Oil pump body | 1 | 19 |
| Rye | 2246 | Oil pump cover | 1 | 19 |
| Saber | 2247 | Oil pump gear (driven) | 1 | 19 |
| Sack | 2248 | Oil pump gear (driver) | 1 | 19 |
| Sago | 2249 | Oil pump gland nut | 1 | 19 |
| Salad | 2250 | Oil pump gland | 1 | 19 |
| Salt | 2251 | Oil pump oil filter | 1 | 19 |
| Sand | 2252 | Oil pump shaft | 1 | 19 |
| Janu | 22)2 | On pump share | 1 | 17 |

^{*}Omitted from plate.

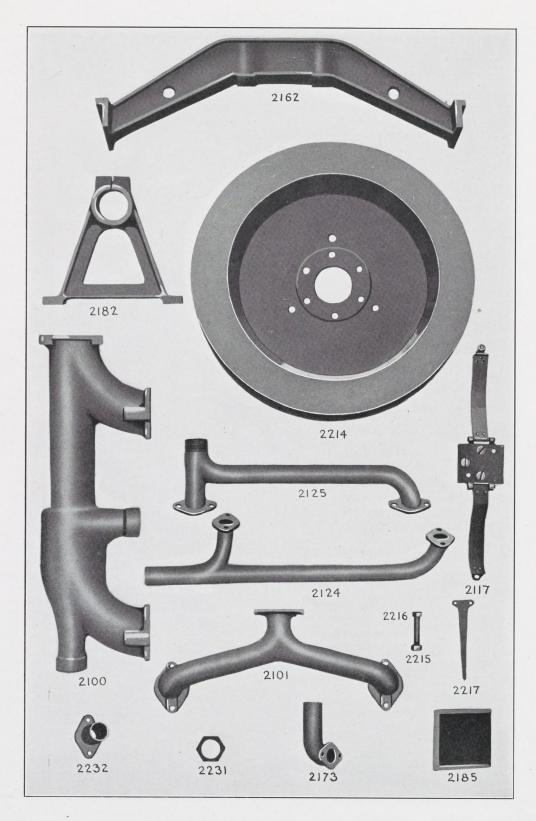


PLATE NO. 20—FLY WHEEL ASSEMBLY

FLY WHEEL ASSEMBLY, ETC.

| CODE | Part Number | NAME OF PART | Number used per Tractor | Shown on Plate |
|--------|----------------|---------------------------------|-------------------------------|----------------------|
| Sash | 2100 | Exhaust manifold | 1 | 20 |
| Satin | 2101 | Inlet manifold | 1 | 20 |
| Satyr | 2117 | Magneto straps and base | 1 | 20 |
| Scale | 2124 | Upper water pipe | 1 | 20 , |
| Scene | 2125 | Lower water pipe | 1 | 20 |
| Seal | 2162 | Crankcase supporting arm | 1 | 20 |
| Sector | *2163 | Stud for supporting arm, ¾" dia | 2 | * |
| Senate | 2173 | Water pump elbow | 1 | 20 |
| Shade | 2182 | Fan bracket | 1 | 20 |
| Sham | 2185 | Magneto bracket | 1 | 20 |
| Shed | 2214 | Fly wheel | 1 | 20 |
| Shelf | 2215 | Fly wheel bolt | 6 | 20 |
| Shun | 2216 | Nut for flywheel bolt | 6 | 20 |
| Sign | 2217 | Flywheel index finger | 1 | 20 |
| Silk | 2231 | Nut for lower water pipe | 1 | 20 |
| Skate | 2232 | Lower water pipe extension | 1 | 20 |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | |
| | | | | 9 |

^{*}Omitted from plate.

4.4

